



調整事項

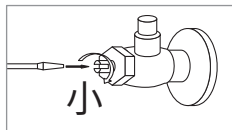

水量調整
以一字起子在三角凡而處調整所需供水水量
順時針方向 ----- 減少水量
逆時針方向 ----- 增加水量

(DC) 換裝新電池

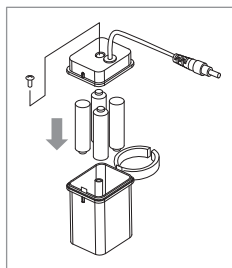


取下電池盒後，將電池盒蓋上螺絲卸下，並將電池取出，換裝新電池後，再依反向裝回即可

※電池規格：3號鹼性電池4顆，各便利超商或照相館均有販售

※感應視窗若顯示紅色燈閃爍狀態即表示電力不足，請更換電池

日常檢查及保養

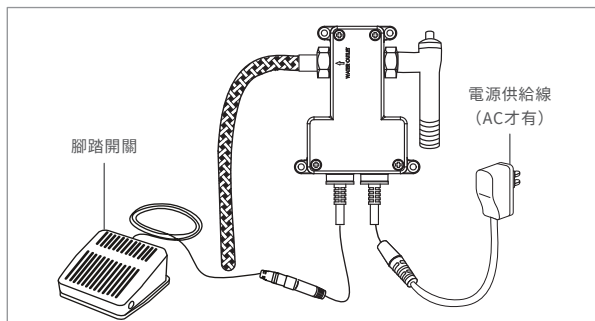

1. 龍頭及控制盒內有精密電子零件，以棉布沾中性清潔劑擦洗，切勿使用菜瓜布或硬毛刷等物品刷洗，以避免刮傷龍頭表面
2. 每隔3~6個月請清洗控制盒內電磁閥過濾水栓之濾網，以免水量變小或阻塞
3. 請勿於產品的腳踏板上放置物品，以免造成錯誤動作

腳踏式龍頭

安裝、使用說明書

注意事項

- AC式腳踏龍頭 / DC式腳踏龍頭
- 安裝及使用前，請先詳細閱讀本說明書
- 安裝完畢後，請務必將本說明書交給客戶

1011

使用方法



輕踩一下腳踏開關即出水（最長出水60秒即自動停水），再輕踩一下腳踏開關停止出水



一直踩著腳踏開關即一直出水（最長出水60秒即自動停水），放開腳踏開關即停止出水

※請避免安裝於太陽直射處

※請勿敲擊本體，或在其上掛放重物

※請勿堵塞排水口(如毛巾等物)

故障及異常處理方法

狀況	可能原因	處理方法
水流不止	腳踏開關故障	是否有異物壓制導致水流不止
	電磁閥阻塞	請通知本公司之服務人員處理
不動作	電磁閥端子未接妥	請將電磁閥端子重新接好
	電磁閥故障	請通知本公司之服務人員處理
	(AC)電源插頭未插	請重新插好電源插頭
	(DC)電池端子未接妥	請重新接好電池端子
	(DC)電池電力不足	請依規格更換新電池（請參閱換裝新電池說明）
	電路故障	請通知本公司之服務人員處理
	腳踏開關端子未接妥	請重新接好腳踏開關端子
水量變小	供水量太小	請將三角凡而的供水量調大（請參閱調整事項說明）
	過濾水栓阻塞	請將過濾水栓內濾網之雜質清除（請參閱日常檢查說明）

產品規格與適用範圍

產品名稱		腳踏式龍頭	
		AC	DC
規格說明	使用電源	110V~220V 50 / 60Hz	3號鹼性電池×4顆
	電源線長度	100cm	
	適用水壓	0.5~5 kgf/cm ²	
	腳踏出水時間	約1秒	
	出水量	5L/min(1kgf/cm ²)以上	
	延遲止水時間	約1秒	
	進水管徑	PF1/2	
	適用水溫範圍	5°C~65°C	
	適用環境溫度	5°C~50°C	
	適用臉盆型式	單孔（孔徑Ø35~Ø45mm）	

※本機採腳踏方式控制出水

※本機在使用自動感應出水時設有60秒自動停水保護裝置

[illegible]

項次	名稱	規格	數量	備註
1	水龍頭主體	銅	1	
2	轉接座	銅	1	
3	墊圈	橡膠	2	
4	平面華司	不鏽鋼	1	
5	主體固定螺帽	塑膠	1	
6	高壓鋼絲接管	不鏽鋼	1	
7	鹼性電池	AA	4	DC用
8	電池盒	ABS / 電子	1	DC用
9	電源供給器	電子	1	AC用
10	腳踏開關	電子	1	
11	三角凡而	銅	1	
12	電磁閥	POM 塑鋼	1	
13	控制盒上下蓋	塑膠	1	
14	電磁閥控制線路	銅 / 塑膠	1	

※為確保使用安全，浴室或廁所之插座，請配合於配電時在電源開關箱內加裝漏電斷路器

A technical drawing showing a bolt and nut assembly. The bolt is threaded and passes through a plate. A washer is placed under the nut, and a split lock washer is placed under the washer. The split lock washer has a split design to provide additional clamping force.

A diagram of a four-way splitter. It has a central body with four ports. One port on the left is connected to a braided cable. One port on the right is connected to a coiled cable. The bottom two ports are connected to two USB cables. The diagram is oriented vertically, with the splitter body in the center and the cables extending outwards.

Diagram illustrating the power supply and water connection for the device:

- 進水口 IN** (Water Inlet): The top right connection point for the water supply.
- 出水口 OUT** (Water Outlet): The top left connection point for the water supply.
- 電源供給線 (AC才有)** (Power Supply Line (AC only)): The power cord connected to the bottom of the device.
- 腳踏開關** (Foot Pedal Switch): A foot pedal connected to the bottom of the device via a cable.

※DC版請先接上電池盒（內要裝有電池）再行測試